 




# External - Door Entry Components



## Colour Camera

For use with flush-mounted outdoor station

  - LSG.1265.66** Matt White
- LSG.1265.67** Anthracite
- LSG.1265.65** Satin Silver




## Speaker and 1-gang LED Switch

For use with flush-mounted outdoor station

- White LED**
- LSG.1260.66** Matt White
  - LSG.1260.67** Anthracite
  - LSG.1260.65** Satin Silver

 - Blue LED**
- LSG.1271.66** Matt White
  - LSG.1271.67** Anthracite
  - LSG.1271.65** Satin Silver



## Speaker and 2-/3-gang LED Switch

For use with flush-mounted outdoor station

- White LED**
- LSG.1261.66** Matt White
  - LSG.1261.67** Anthracite
  - LSG.1261.65** Satin Silver

- Blue LED**
- LSG.1272.66** Matt White
  - LSG.1272.67** Anthracite
  - LSG.1272.65** Satin Silver



## 1-gang LED Switch

For use with flush-mounted outdoor station

- White LED**
- LSG.1262.00**

- Blue LED**
- LSG.1293.00**

 
 


## 2-/3-gang LED Switch

For use with flush-mounted outdoor station

- White LED**
- LSG.1263.00**

- Blue LED**
- LSG.1294.00**



## Blank Cover Plate

For 2/3-gang LED switch

- LSG.1255.66** Matt White
- LSG.1255.67** Anthracite
- LSG.1255.65** Satin Silver